



FOR SERIES I ATTACHMENTS

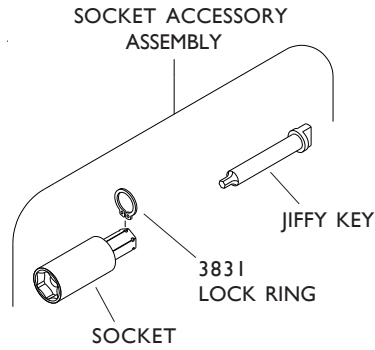

STALL TYPE INSTALLATION 5/64" / 1.98 mm JIFFY KEY

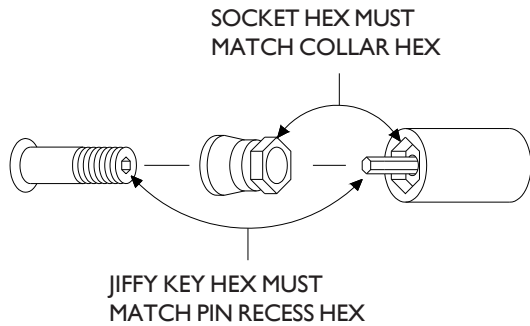

FOR 12 POINT CONFIGURATION ADD X AFTER SOCKET OR SOCKET ACCESSORY ASSEMBLY NUMBER.

LENGTH OF SOCKET

JIFFY KEY HEX	SOCKET HEX	DESCRIPTION	1/4"	1/2"	3/4"	1"	1 1/2"
5/64" 1.98 mm	7/32" 5.56 mm	SOCKET ACCESSORY ASSEMBLY	18547	18548	18549	18550	18551
		SOCKET	12517	12518	12519	12520	12521
		JIFFY KEY STALL	18602	18603	18604	18605	18606
	1/4" 6.35 mm	SOCKET ACCESSORY ASSEMBLY	18552	18553	18554	18555	18556
		SOCKET	12522	12523	12524	12525	12526
		JIFFY KEY STALL	18602	18603	18604	18605	18606
	9/32" 7.14 mm	SOCKET ACCESSORY ASSEMBLY	18557	18558	18559	18560	18561
		SOCKET	12527	12528	12529	12530	12531
		JIFFY KEY STALL	18602	18603	18604	18605	18606
	5/16" 7.93 mm	SOCKET ACCESSORY ASSEMBLY	18562	18563	18564	18565	18566
		SOCKET	12532	12533	12534	12535	12536
		JIFFY KEY STALL	18602	18603	18604	18605	18606
	1 1/32" 8.73 mm	SOCKET ACCESSORY ASSEMBLY	18567	18568	18569	18570	18571
		SOCKET	12537	12538	12539	12540	12541
		JIFFY KEY STALL	18602	18603	18604	18605	18606