



FOR SERIES I ATTACHMENTS

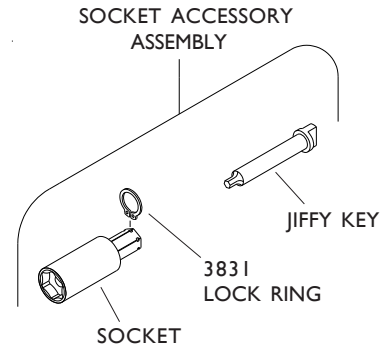

STALL TYPE INSTALLATION 3/32" / 2.38 mm JIFFY KEY

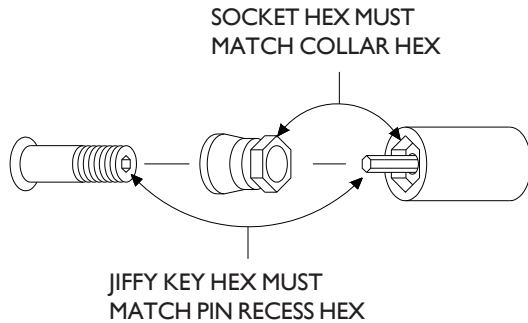

FOR 12 POINT CONFIGURATION ADD X AFTER SOCKET OR SOCKET ACCESSORY ASSEMBLY NUMBER.

LENGTH OF SOCKET

JIFFY KEY HEX	SOCKET HEX	DESCRIPTION	1/4"	1/2"	3/4"	1"	1 1/2"
3/32" 2.38 mm	7/32" 5.56 mm	SOCKET ACCESSORY ASSEMBLY	18572	18573	18574	18575	18576
		SOCKET	12517	12518	12519	12520	12521
		JIFFY KEY STALL	18607	18608	18609	18610	18611
	1/4" 6.35 mm	SOCKET ACCESSORY ASSEMBLY	18577	18578	18579	18580	18581
		SOCKET	12522	12523	12524	12525	12526
		JIFFY KEY STALL	18607	18608	18609	18610	18611
	9/32" 7.14 mm	SOCKET ACCESSORY ASSEMBLY	18582	18583	18584	18585	18586
		SOCKET	12527	12528	12529	12530	12531
		JIFFY KEY STALL	18607	18608	18609	18610	18611
	5/16" 7.93 mm	SOCKET ACCESSORY ASSEMBLY	18587	18588	18589	18590	18591
		SOCKET	12532	12533	12534	12535	12536
		JIFFY KEY STALL	18607	18608	18609	18610	18611
	1 1/32" 8.73 mm	SOCKET ACCESSORY ASSEMBLY	18592	18593	18594	18595	18596
		SOCKET	12537	12538	12539	12540	12541
		JIFFY KEY STALL	18607	18608	18609	18610	18611