



# FITS SERIES 4 ATTACHMENTS

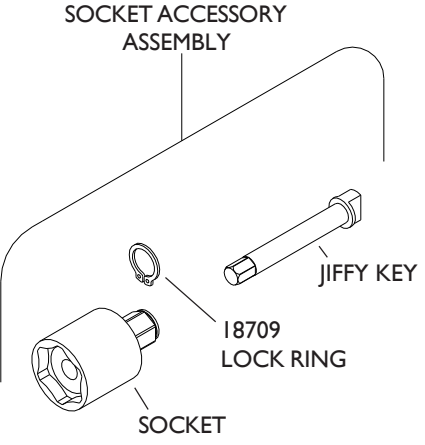

## STALL TYPE INSTALLATION 1/8" / 3.17 mm JIFFY KEY

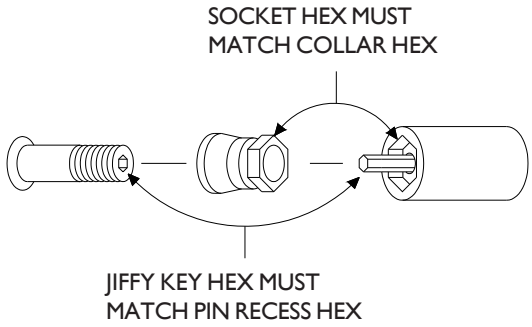

FOR 12 POINT CONFIGURATION ADD X AFTER SOCKET OR SOCKET ACCESSORY ASSEMBLY NUMBER.

### LENGTH OF SOCKET

JIFFY KEY HEX	SOCKET HEX	DESCRIPTION	1/2"	1"	1 1/2"	2"	2 1/2"	3"
1/8" 3.17 mm	3/8" 9.52 mm	SOCKET ACCESSORY ASSEMBLY	19135	19136	19137	19138	19139	19140
		SOCKET	19043	19044	19045	19046	19047	19048
		JIFFY KEY STALL	19001	19002	19003	19004	19005	19006
	7/16" 11.11 mm	SOCKET ACCESSORY ASSEMBLY	19141	19142	19143	19144	19145	19146
		SOCKET	19049	19050	19051	19052	19053	19054
		JIFFY KEY STALL	19001	19002	19003	19004	19005	19006
	1/2" 12.7 mm	SOCKET ACCESSORY ASSEMBLY	19147	19148	19149	19150	19151	19152
		SOCKET	19055	19056	19057	19058	19059	19060
		JIFFY KEY STALL	19001	19002	19003	19004	19005	19006
	9/16" 14.29 mm	SOCKET ACCESSORY ASSEMBLY	19153	19154	19155	19156	19157	19158
		SOCKET	19061	19062	19063	19064	19065	19066
		JIFFY KEY STALL	19001	19002	19003	19004	19005	19006
	5/8" 15.87 mm	SOCKET ACCESSORY ASSEMBLY	19159	19160	19161	19162	19163	19164
		SOCKET	19067	19068	19069	19070	19071	19072
		JIFFY KEY STALL	19001	19002	19003	19004	19005	19006